



KITSEC Security

Operating Manual



KITSEC uses an AAP/EliteControl Product and has a 5 year warranty
(This is for the GEAR ONLY, not the installation, travel time,
installation time, or any further repairs needed)

NOTE: *KITSEC and EliteControl* are not involved in or responsible for the installation and maintenance of our products. Please contact your installer. Also, our smartphone app requires a subscription to work. Your first year is free.

Sensor Names

Sensor No	Sensor Name
1.	
2.	
3.	
4.	
5.	
6.	
7.	
8.	

Note Sensor 1 – is always the entry Sensor and has an entry and delay programmed in of **30 Seconds**. You have 30 seconds before the sensor goes off. This gives you time to exit or enter.

Sensors 2-8 are programmed with a 0-second entry delay and will go off immediately once set and triggered.

Installer Details	
Name:	
Company:	
Date Installed:	
Date needing service:	
Service Phone Number:	
Company Email:	
Note:	

KITSEC uses an AAP/EliteControl Product and has a 5 year warranty
(This is for the GEAR ONLY, not the installation, travel time, installation time, or any further repairs needed)

Keypad and Functions



Arming Your System from Keypad

1. Locate the house icon labeled 'ARM' on the home screen Press the icon, you will see a 'RED' lock icon appear followed by an audible exit delay. Now, exit the premises



Disarming Your System form Keypad

1. Press on the red 'ARMED' icon, this will bring up a keypad. **Note:** Keypad may automatically become visible Enter your user code Press the tick to enter the code in. Providing the code was correct you will hear a **triple beep** and be taken to the home screen. The system is now **disarmed**.



REMOTE ARM and DISARM

Push to ARM



Push to DISARM

**Push FOR Panic
and Alarm to go off**


Arming Your System from Remote

1. Push the Top left Button It has a Lock on it. This will ARM/Set your alarm from your remote. You will see the remote LED go Green and feel a vibration from the remote



Disarming Your Remote

1. Push the Unlock button top right to Disarm your alarm. The alarm will be unset.

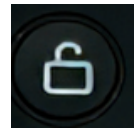

Panic Button -

The remote has a panic button set up. If you push the Gate ICON bottom Right button it will set of the a panic and will set the alarm off. To Disarm the alarm push the Lock button on the remote to Disarm the panic or the Touch screen on the hub






Smart Phone ARM and DISARM



NOTE: The Smart Phone app requires a subscription - The first year is free with the purchase of a panel. To maintain app control you will need to pay for the next year's subscription. A credit card will be needed. A reminder will be sent to you by email.

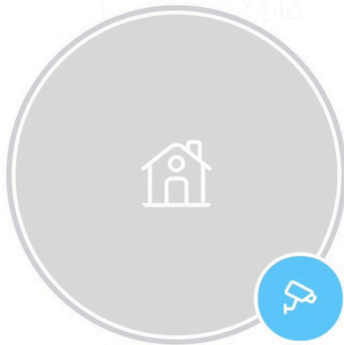

All Disarmed

Security


Sensors

Controls




Arming Your System from Smart Phone App

Once the app is open, click on the lock icon. It will open Area 1

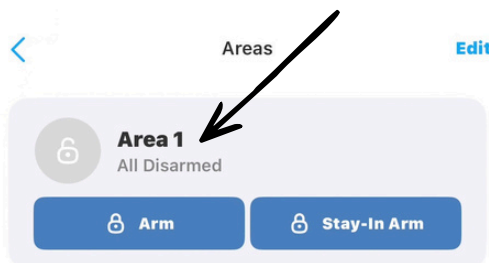



Smart Phone ARMING SYSTEM

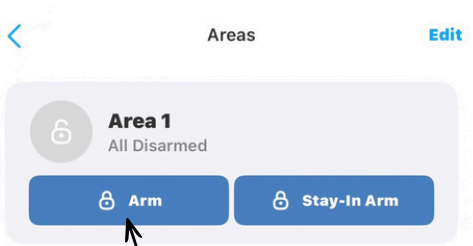

Click on the Arm Button a screen will pop up for you to put in a code


Please enter your panel's alarm code.

Remember password




Put in the 4 digit code for your alarm you chose - then click on the TICK button to accept code, If you select *remember PASSWORD* you dont need to type in code each time

Remember password

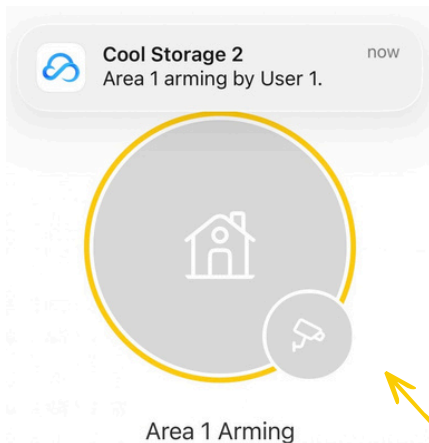


A yellow indicator will let you know it is arming

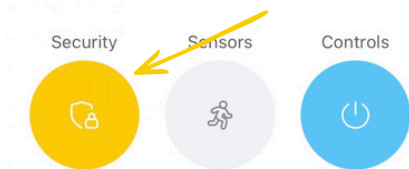

A notification will pop up to say USER1 is ARMING system - Area 1 Arming




Smart Phone ARM and DISARM

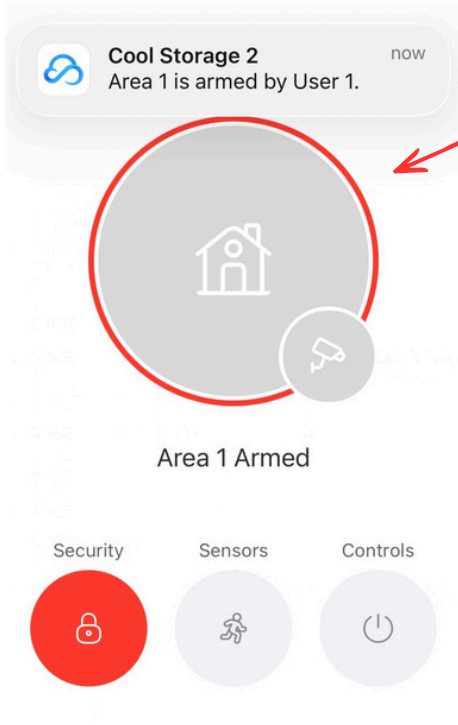


A notification will pop up to say Area 1 is ARMED by USER1

Click on the Arm Button

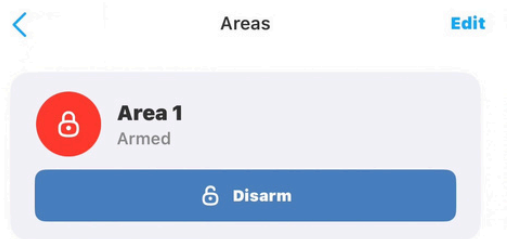


A red Lock indicates the system is Armed

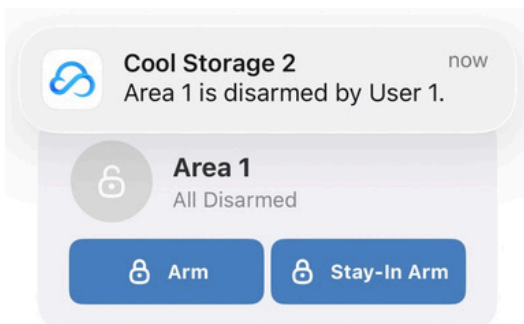




Smart Phone Firmware Update

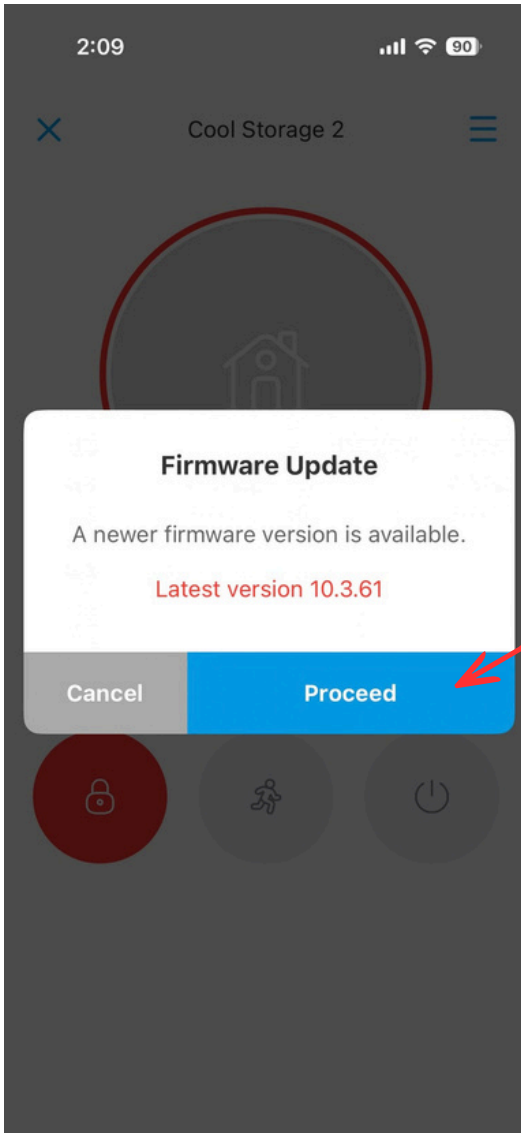


Sometimes the panel will need to have a firmware update. this will pop up when you open the app. You will need to make sure you have full internet wifi to continue. Click proceed and it will set up a firmware update. It should take a few minutes to do this.



Smart Phone SENSORS

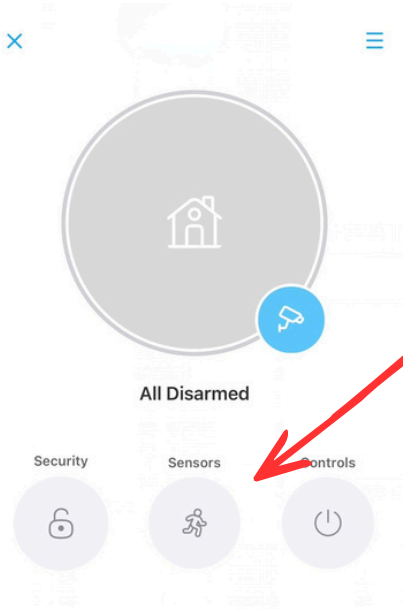


Sensor section - this is the area to see your sensors which is the PIR's.

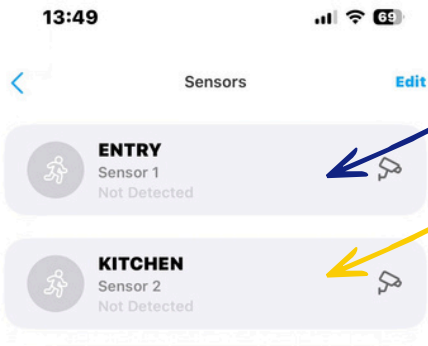


Here is the sensors labels - Sensor 1 is always your entry Sensor. My Sensor 2 is labelled Kitchen, as I have a second door there. Yours might be labelled differently. If either are triggered it will show you here which sensor was triggered.



Smart Phone SENSORS

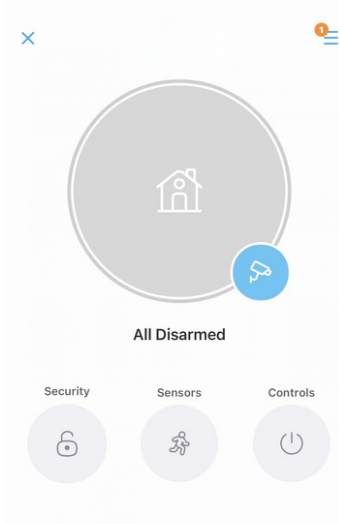

This is where you will find the settings for the panel and the status of your panel if you have any battery low or issues it will appear here.

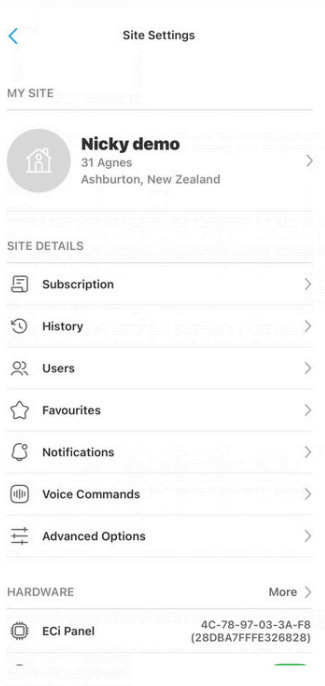

The **Green** shows the panel is working and is ok. A red will indicate an issue.

I can also upgrade the panel here; click upgrade to get new Firmware

